



# Remove back of camera

Learn how to remove the back Nikon Coolpix 5600 Camera

Written By: Crista Riedy





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Remove Back of camera



- Remove the screws from the bottom, right, and left side of camera.

## Step 2



- Remove the back of the camera, may require force.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 07:21:59 AM.